


ACTAS Px60 Quick Start Guide Coil/Motor/Station Voltage And Motor Current Connections

Coil/Motor/Station Voltage And Motor Current Connections


1. **Connect** the Cables labeled Voltage for voltage measurements. **Connect** the Cables labeled Current for current measurements. On The P360+ connect the cables to the inputs labeled Coil (U1, U2) and Motor (U, I). On The P260+ connect the cables to the inputs labeled Voltage / Coil (U) (I).



-ACTAS P360+ with three voltage measurement inputs.

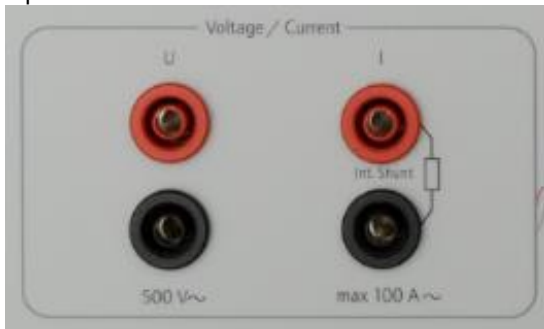

2. **Connect** the Black & Red plug to the correct coil(s) or motor.

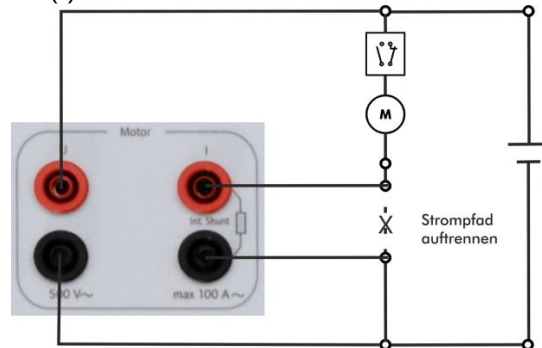

-The motor voltage can be recorded in parallel with the motor current via the measurement input U.

-As the test instruments only have one measurement input for the motor current, the motor current test for breakers with a single-pole drive must be carried out pole by pole. This means that for a full test of all three drives, three records must be made. If the motor loaded mechanism is controlled sequentially then the measurement of the motor current of all tensioning motors can be carried out in a single measurement.