

ACTAS Px60 Quick Start Guide Index

1. ACTAS Px60 Quick Start Guide – Page 2
2. Software Update – Page 4
3. Remote Control via Web Server – Page 5
4. Exporting Test Jobs – Page 6
5. Exporting Test Job Report – Page 8
6. Main Contact and Auxiliary Contact Connections – Page 9
7. Electronic Control and Relay Output Connections – Page 10
8. Travel Transducer and Sensor Connections – Page 11
9. Coil, Motor, Station Voltage, and Motor Current Connections – Page 13
10. Add Sensor to Library – Page 14
11. Sensor Sets and Adjustment – Page 15
12. Travel Transducer Setup – Page 16
13. First Trip – Page 18
14. AIS with Dual Ground – Page 19
15. Both Sides Grounded Testing on AIS – Page 21
16. Both Sides Grounded Testing and SRM/DRM Testing on GIS – Page 23